

# THE VIBRO SONIC SYSTEM EFFECT

## The NEXT GENERATION of MASSAGE SYSTEM!

### MUSCLE RELAXATION

After a long day at work or school, or even after doing a strenuous activity, you are bound to feel discomfort, fatigue, and soreness in your muscles.

10 to 15 minutes with our Vibro-Sonic system will effectively eliminate all that, loosening your muscles and relaxing them.

### STRESS RELIEF

Tension and stress can lead to headaches. Experiencing a Vibro-Sonic massage, especially one designed to provide a massage on the neck and shoulder area, will effectively get rid of all that stress, keeping side effects such as headaches at bay.

### PAIN RELIEF

The most immediate effect of a Vibro-Sonic massage system is pain relief. Combined with hot water, the massage will allow your body to release the necessary endorphin to relax your overworked and tired muscles, so that all your body aches and pains will be eased.

### THE PERFECT NECK MASSAGE

Neck pain and stiffness can make daily life difficult and even prevent your ability to work or function.



Because the Vibro-Sonic Jet doesn't need air or water, it is the perfect jet for a Neck massage system as they can be installed above the water level at the neck position in the bathtub. With its smooth silicone thumb it can simulate therapeutic touch using motions like brushing, circling and tapping to relieve any tensions and pain.

### HAPPY FEET, HEALTHY BODY

In Asian cultures, our feet are like the roots of a tree. The sole of the foot has thousands of nerve endings and many acupressure points which are connected to vital organs of the body.



Strategically located, the Vibro-Sonic jet will increase relaxation in the body by stimulating the reflex areas on the foot. It will help with people who have diabetes, high blood pressure, poor circulation and sleep quality.

## THE ONE JET THAT DOES IT ALL!

### VIBRO SONIC JET

It PULSATES, it VIBRATES, it SEQUENCES.

Depending on your body and muscle density, the massage can be totally personalized to be soft and gentle to relax you or to be more vigorous and deeply penetrate within your muscles to relieve the pain.



#### PULSATION

The Vibro-Sonic System offers various levels of power, depending on your body and muscle density.




#### VIBRATION

The Vibro-Sonic System offers various levels of vibration allowing the massage to deeply penetrate within your muscles.



#### SEQUENCES

The Vibro-Sonic System offers different and unique Shiatsu massage sequences that will offer a variety of massage where you need it most.

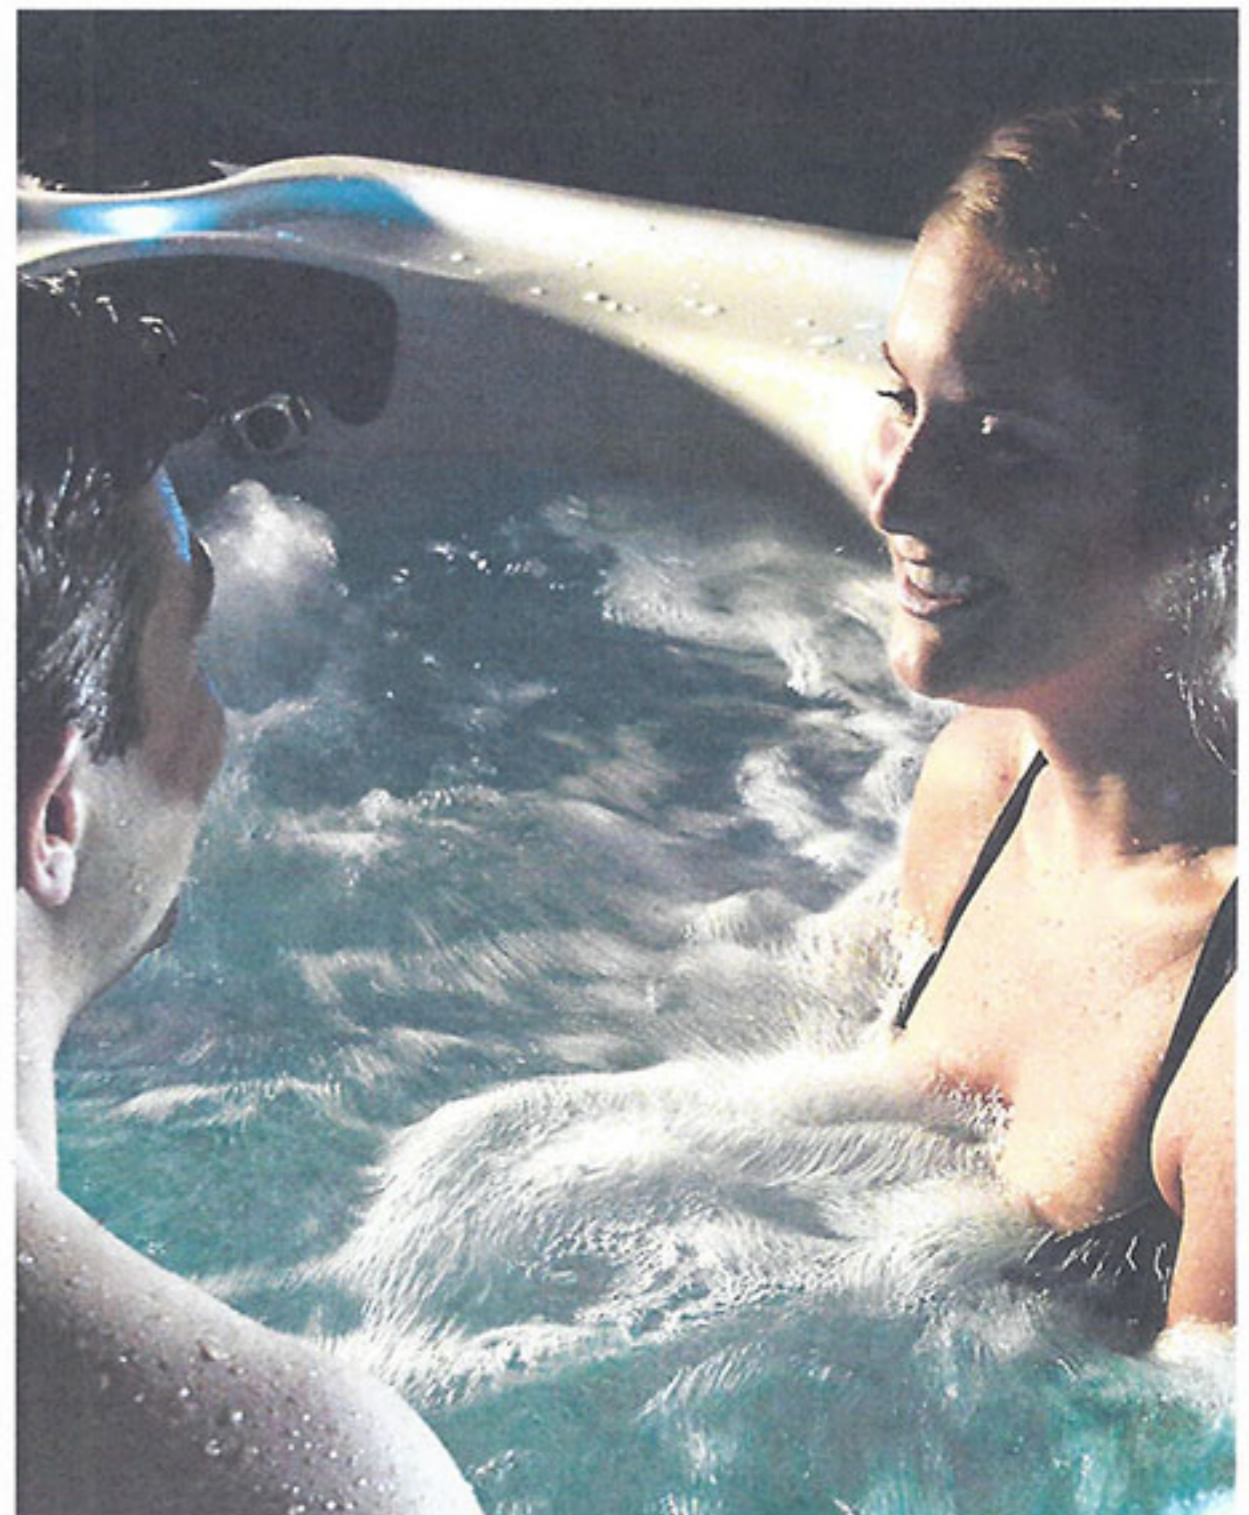

## VIBROSONIC JET OPTION

Thank you for your purchase of a Viking Spa. If your spa was purchased with the optional Vibrosonic Jet System, this manual will help you understand the various control and types of massage you can set when using your spa.


Pictured below are the two types of Vibrosonic Jets that are used in the Vibrosonic option that is installed in various Viking models.



Smaller Vibrosonic Jet found in 4 jet option on the Aurora 2, Aurora 3, Royale, Royale ETS, Regal & Regal ETS models. There are 6 smaller Vibrosonic Jets installed in the Legacy, Legend, Heritage and Tradition Series spas.

4 Larger Vibrosonic Jets and 8 smaller Vibrosonic Jets are found in the 12 jet option on the Royale 1-pump and Regal 1-pump Systems.

## VIBROSONIC TOPSIDE CONTROL INSTRUCTIONS

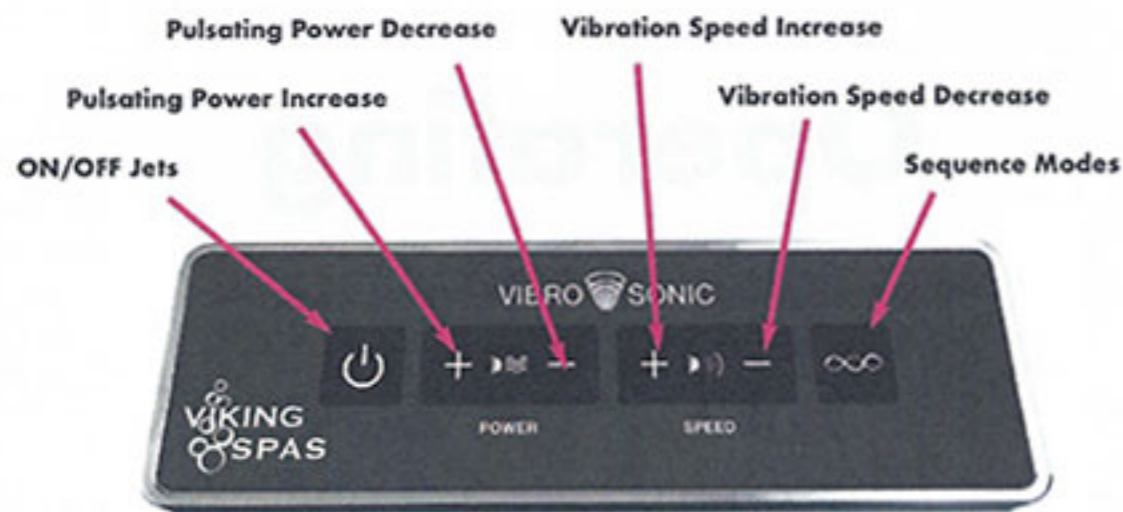

### On/Off Jets

To begin using the vibrosonic jets in your Viking spa, simply press the On/Off button to begin the operation. Upon pressing the button the Vibrosonic jets will begin to vibrate. Press again and the jets will turn off.

**NOTE:** The jets will automatically turn off after 20 minutes. Please be aware that this is a normal time-out feature built into the system.

### Pulsating Power Increase

To increase the vibration intensity press and hold the + button. You will begin to feel the jet pulsate at an increased rate.

### Pulsating Power Decrease

To decrease the vibration intensity press and hold the - button. You will begin to feel the jet pulsate at a decreased rate.

### Vibration Speed Increase

To increase the time frame between jet pulsations press and hold the + button. The rate at which the jets alternate vibration will now increase.

### Vibration Speed Decrease

To increase the time frame between jet pulsations press and hold the - button. The rate at which the jets alternate vibration will now decrease.

### Sequence Modes

There are three different therapy vibration modes that are provided by the Vibrosonic control system. Each sequence varies the pattern by which the jets operate. By pressing the sequence button consecutively will change the pattern at which the jets vibrate.